

EnVivo

User Guide Soundbar



AFTER SALES SUPPORT



GB 0333 200 5846 RE 1890 917 060

accessionx-uk@teknihall.com

MODEL: 1468 PC: 72951 11/2016

- Bluetooth Soundbar
- Subwoofer
- Wall Mount
- Remote Control + Batteries
- RCA Cable
- Optical Cable
- Line-in Cable
- User Manual

3

YEAR WARRANTY

CONTENTS

WELCOME4

PACKAGE CONTENT4

CONNECTING OPTIONS5

 Power6

 Remote control6

 Display indicators7

 Mounting7

INTRODUCTION7

 Soundbar Front7

 Soundbar Back7

 Soundbar Side8

REMOTE8

AUDIO INPUTS9

 Using the USB port9

 Using the Optical Input9

 Using the Line In9

BLUETOOTH CONNECTION10

 Pairing a Bluetooth Device for the First Time10

BLUETOOTH SOUND INDICATORS11

PLAYING AUDIO WIRELESSLY11

SPECIFICATIONS11

WARNINGS AND PRECAUTIONS11

 Warnings11

 Cautions12

IMPORTANT SAFETY INSTRUCTIONS12

FAQ13

DISPOSAL14

WARRANTY CARD16

AFTER SALES SUPPORT



0333 200 5846



1890 917 060

 accessionx-uk@teknihall.com

MODEL: 1468 PC: 72951 11/2016

- Bluetooth Soundbar
- Subwoofer
- Wall Mount
- Remote Control + Batteries
- RCA Cable
- Optical Cable
- Line-in Cable
- User Manual

3

YEAR WARRANTY

WELCOME

You have made an excellent choice with the purchase of this quality EnVivo brand product.

 
By doing so you now have the assurance and peace of mind, which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of Accession ApS.

We want you to be completely satisfied with your purchase so this EnVivo product is backed by a comprehensive manufacturer's 3-year warranty and an outstanding after sales service through our dedicated Helpline.


We hope you will enjoy using your purchase for many years to come.

If you require technical support or in the unlikely event that the purchase you have made is faulty, please telephone our Helpline for immediate assistance. Faulty product claims made within the 3 year warranty period will be repaired or replaced free of charge provided that you have satisfactory proof of purchase (keep your till receipt safe!) This does not affect your statutory rights. However, be aware that the warranty will become null and void if the product is found to have been deliberately damaged, misused or disassembled.


PACKAGE CONTENT

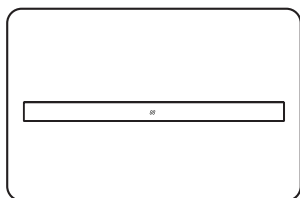


Soundbar

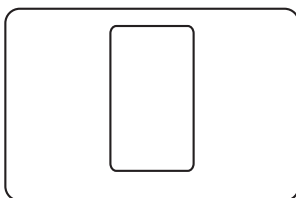 


Subwoofer

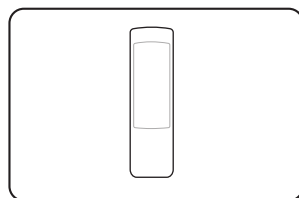 


Remote

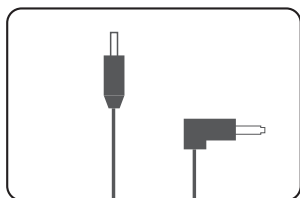 


Line In to Line Out cable

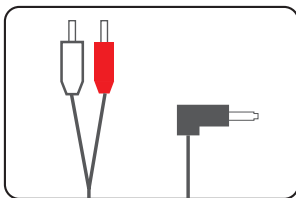 


Line In to RCA cable

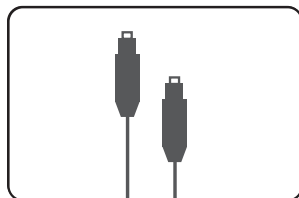 


Optical cable

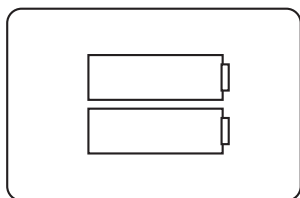 

2 x AAA Batteries

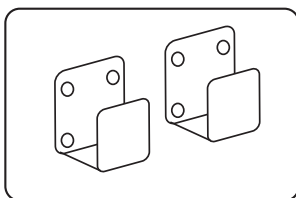 

2 x Mounting Brackets

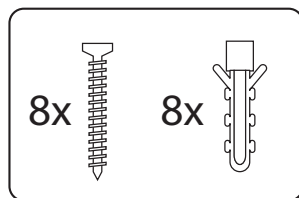 

8 x Screws
+ 8 plastic screw Anchors

AFTER SALES SUPPORT



0333 200 5846 1890 917 060

accessionx-uk@teknihall.com

 
- Bluetooth Soundbar
- Subwoofer
- Wall Mount
- Remote Control + Batteries
- RCA Cable
- Optical Cable
- Line-in Cable
- User Manual

3



YEAR WARRANTY

MODEL: 1468 PC: 72951 11/2016


CONNECTING OPTIONS

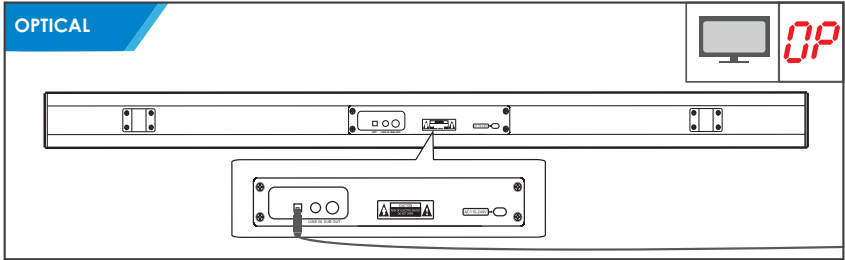

  The soundbar only supports PCM sound; see the Using the Optical Input section for more information. Not available on all televisions.

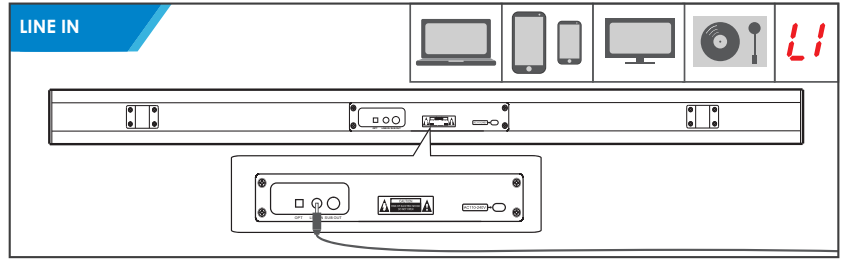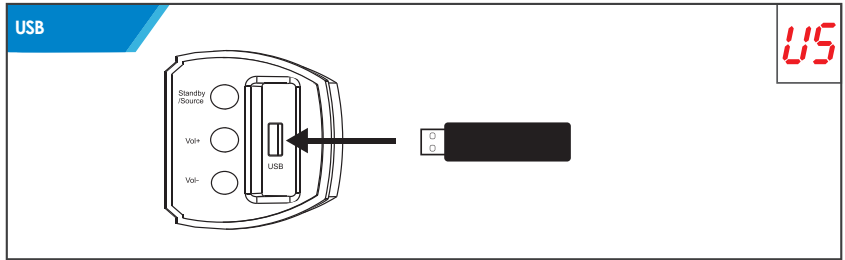

 Insert to a 3.5mm Line Out port.
To avoid noise on sound signal, ensure that the Line In cable is not touching other power cables.

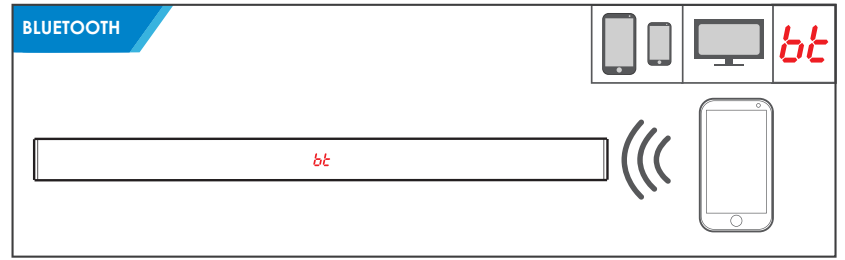

See the Pairing a Bluetooth Device for the First Time section for bluetooth setup.
Not available on all televisions.

AFTER SALES SUPPORT

 0333 200 5846  1890 917 060

 accessionx-uk@teknihall.com

MODEL: 1468 PC: 72951 11/2016

- Bluetooth Soundbar
- Subwoofer
- Wall Mount
- Remote Control + Batteries
- RCA Cable
- Optical Cable
- Line-in Cable
- User Manual

 
3

YEAR WARRANTY

SETUP

Power


Plug AC/DC adapter soundbar to AC outlet. Connect subwoofer to soundbar.

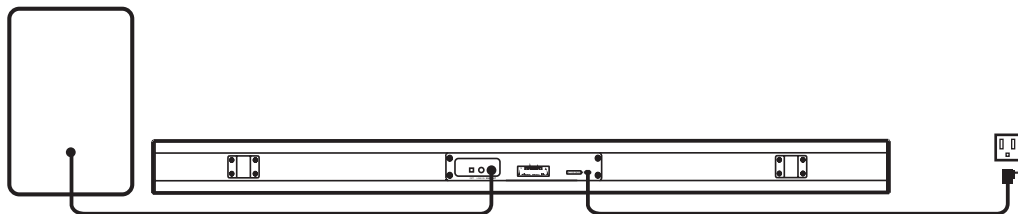


Remote control

Requires 2 AAA batteries (included)

 
A: Remove the battery compartment cover

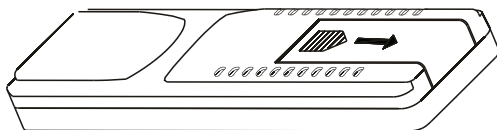

 B: Insert 2 AAA batteries according to the markings inside the compartment.

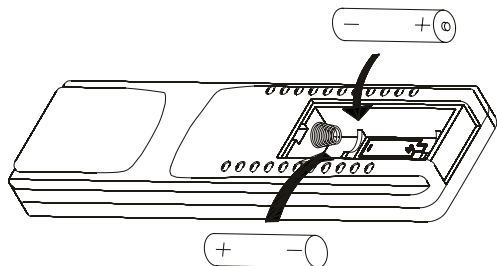

C: Close the compartment.

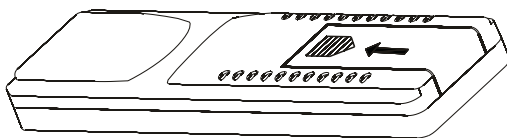 

AFTER SALES SUPPORT



0333 200 5846 1890 917 060



accessionx-uk@teknihall.com

MODEL: 1468 PC: 72951 11/2016

- Bluetooth Soundbar
- Subwoofer
- Wall Mount
- Remote Control + Batteries
- RCA Cable
- Optical Cable
- Line-in Cable
- User Manual

3

YEAR WARRANTY

Display indicators


Status	Indicator
Standby mode	--
Optical mode	OP
USB mode	US
Line in mode	LI
Bluetooth mode	BT
Bluetooth ready to pair	BT (blinking)
Adjust volume	Current volume (0 - 32)
Adjust Bass	Current Bass setting (÷5 - 5)
Adjust Treble	Current Treble setting (÷5 - 5)
E1	EQ Music
E2	EQ Movies
E3	EQ News
3d	EQ 3D

Mounting


Please follow the instructions on the enclosed separate mounting instructions.

INTRODUCTION

 Soundbar Front

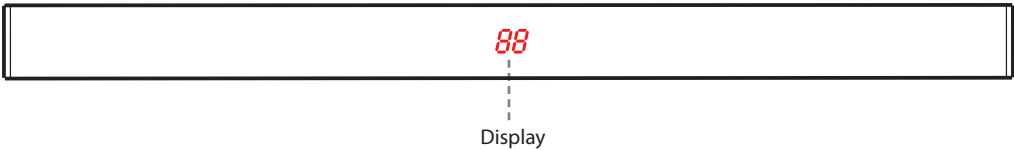

Soundbar Back

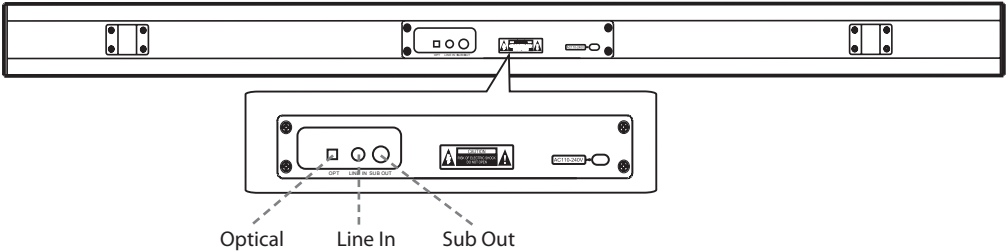 

AFTER SALES SUPPORT

0333 200 5846 1890 917 060

 
accessionx-uk@teknihall.com

MODEL: 1468 PC: 72951 11/2016


- Bluetooth Soundbar
- Subwoofer
- Wall Mount
- Remote Control + Batteries
- RCA Cable
- Optical Cable
- Line-in Cable
- User Manual



Soundbar Side

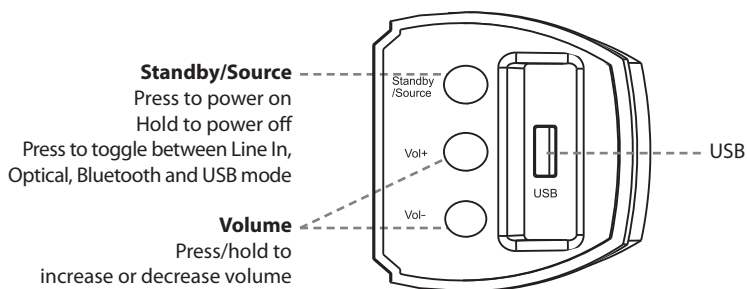

REMOTE

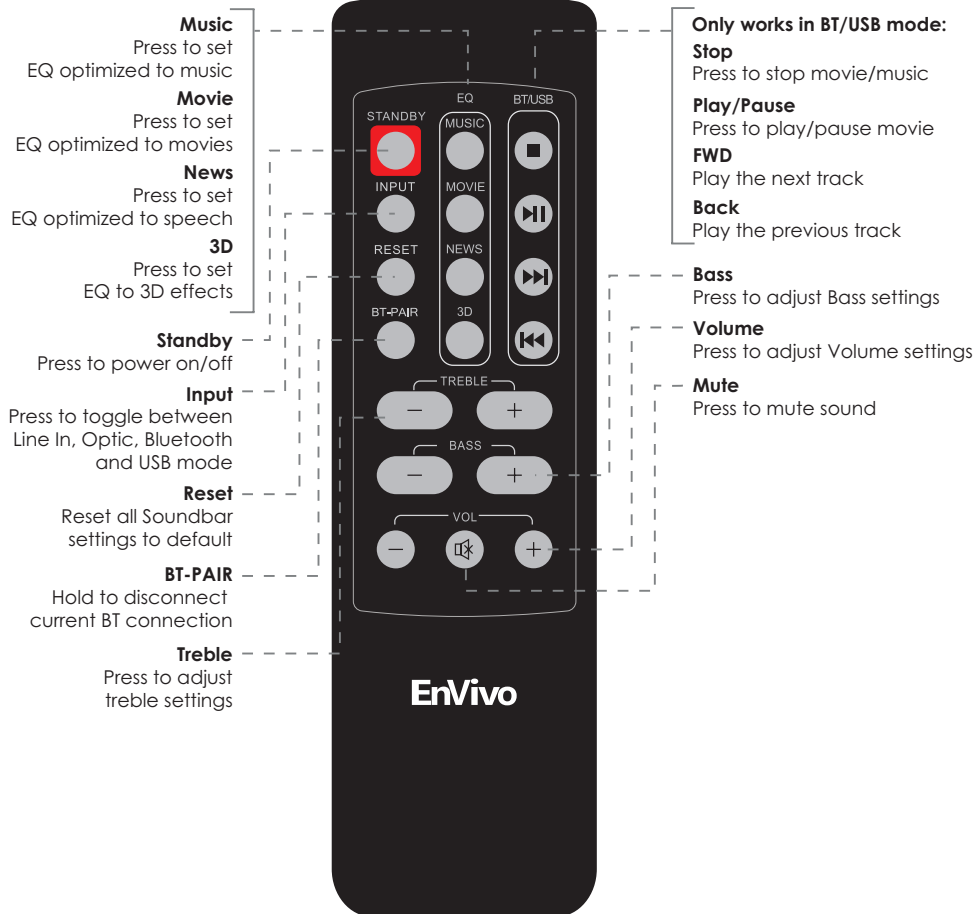 

AFTER SALES SUPPORT



0333 200 5846 1890 917 060



accessionx-uk@teknihall.com

MODEL: 1468 PC: 72951 11/2016

- Bluetooth Soundbar
- Subwoofer
- Wall Mount
- Remote Control + Batteries
- RCA Cable
- Optical Cable
- Line-in Cable
- User Manual

3

 
YEAR WARRANTY

AUDIO INPUTS

Using the USB port

1. Insert a **USB flash drive** into the **USB port**, located on the side of the soundbar.
2. Press the **Standby** button to power on the soundbar.
3. Set the soundbar to **USB mode** by clicking the **Standby** button on the soundbar or clicking the **Input** button on the remote until the **Display** on the soundbar shows **US**.
4. The soundbar will automatically start playing audio files located on the USB flash drive.
5. Use **BT/USB** buttons on the remote to pause/play or skip the selected track.


NOTE: it is recommended to Press the stop button (remote), change playing mode or turn off soundbar power before removing the USB flash drive from the soundbar.

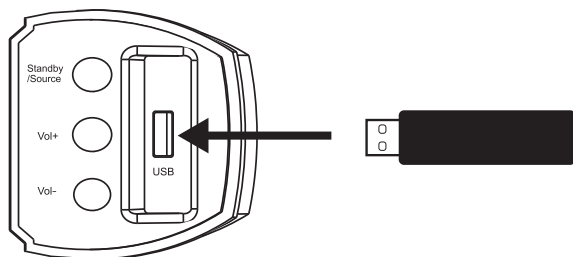

Using the Optical Input

1. Connect the **Digital Optical Audio Cable** to the **Optical input** on the soundbar.
2. Connect the other end of the **Optical cable** to the **optical output** Audio cable to TV.
3. Press the **Standby** button to power on the soundbar.
4. Set the soundbar to **optical mode** by clicking the **Standby** button on the soundbar or clicking the **Input** button on the remote until the **Display** on the soundbar shows **OP**.
5. Using the native controls on your connected device, make sure the **audio settings** are set to **PCM** or **Optical Audio** and are turned On. See your TV manual for more info.
6. Audio from the connected audio source will now be played through the speakers.

 NOTE: This soundbar only supports PCM sound when using the Digital optical cable. if sound is ever missing when using optical cable you need to set your TV's sound settings to play PCM sound. See your TV manual for more information.

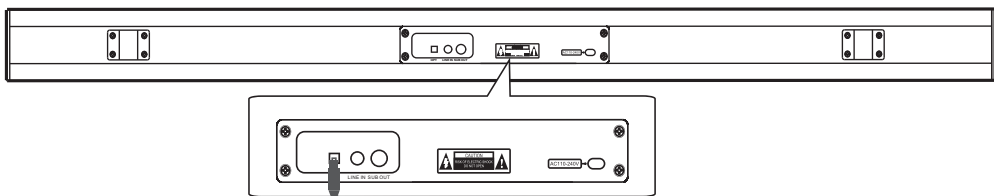

LINE IN

Using the Line In

1. Plug one end of a **3.5 mm audio cable** into the **Line In** on the soundbar.
2. Plug the other end of the 3.5 mm audio cable into the **Line out/headphone output** on a audio device (TV, phone, tablet, computer, mp3 player, etc.).

AFTER SALES SUPPORT

☎ 0333 200 5846 ☎ 1890 917 060

accessionx-uk@teknihall.com

MODEL: 1468 PC: 72951 11/2016

- Bluetooth Soundbar
- Subwoofer
- Wall Mount
- Remote Control + Batteries
- RCA Cable
- Optical Cable
- Line-in Cable
- User Manual

3

 
YEAR WARRANTY

3. Press the **Standby** button to power on the soundbar.
4. Set the soundbar to **Line In mode** by clicking the **Standby** button on the soundbar or clicking the **Input** button on the remote until the **Display** on the soundbar shows **Li**.
5. Audio played through the connected audio device will now be played through the speakers.

NOTE: The Bluetooth Soundbar will automatically go into standby mode after 5 minutes without receiving any audio signal.

NOTE: the included Line In to RCA cable can also be used in Line In mode on the soundbar.

WARNING: Most televisions sets don't support RCA out sound.

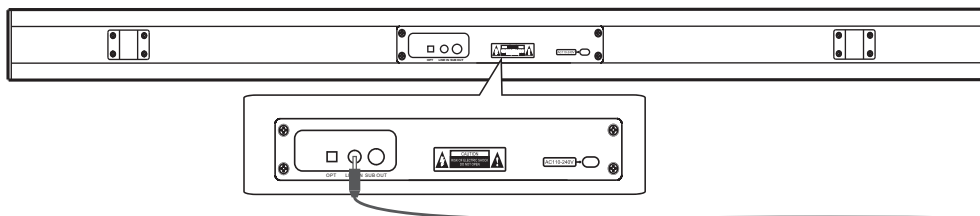

BLUETOOTH CONNECTION

Pairing a Bluetooth Device for the First Time

1. Press the **Standby** button to power on the soundbar.
2. Set the soundbar to **Bluetooth mode** by clicking the **Standby** button on the soundbar or clicking the **Input** button on the remote until the **Display** on the soundbar shows **Bt**.
3. The soundbar will make 2 beeping sounds and the Bt display will blink to indicate that it is ready to pair. When pairing, remain within 3 feet of the unit.

NOTE: if a single beep follows the 2 first beeps or the Bt on the display is not blinking then the Bluetooth on the soundbar is already under the control of another device. Before you can pair a new device you will have to disable the connection between the soundbar and the currently connected Bluetooth device.

4. Using the native controls on your Bluetooth device, search for new Bluetooth connections. Select the **"ENV-1468"** in your Bluetooth settings to pair. The soundbar will make a **single beep** sound to indicate that Bluetooth connection has been established.
5. If your device requests a password, enter the **default "0000"**. Refer to the **user's manual** for your specific device for instructions on pairing and connecting Bluetooth devices.
6. After initial pairing, the unit will stay paired unless unpaired manually by the user, or until it is erased due to a reset of the device.

If your device should become unpaired or you find it is unable to connect, hold the BT-Pair button (remote) down for a few seconds and repeat the above steps.

NOTE: If a device is already paired to the soundbar but you don't know which device, then you can disable the connection by holding the BT-PAIR button for a few seconds. You should now be able to pair a new device to the soundbar.

AFTER SALES SUPPORT

☎ 0333 200 5846 ☎ 1890 917 060

accessionx-uk@teknihall.com

MODEL: 1468 PC: 72951 11/2016

- Bluetooth Soundbar
- Subwoofer
- Wall Mount
- Remote Control + Batteries
- RCA Cable
- Optical Cable
- Line-in Cable
- User Manual

3

YEAR WARRANTY

BLUETOOTH SOUND INDICATORS

Status	Sound indicator
Ready for pairing	2 Beeps
Connected	1 Beep
Disconnect (ready for new pairing)	2 Beeps
Already paired (when selecting Bluetooth mode on soundbar)	2 Beeps followed by 1 Beep

PLAYING AUDIO WIRELESSLY

1. Follow the instructions for **Pairing a Bluetooth Device for the first time.**
2. Use the native controls on the connected Bluetooth Device to select a track.
3. To play, pause or skip the selected track, use the native controls on the connected Bluetooth Device or use the **BT/USB** buttons on the remote.
4. Audio played through the connected Bluetooth device will now be heard through the speakers.

NOTE: The Bluetooth Soundbar will automatically go into standby mode after 5 minutes without receiving any audio signal.

SPECIFICATIONS


- Dimension soundbar: 970 x 50 x 60 cm
- Dimension Subwoofer: 160 x 250 x 280 cm
- Supports Bluetooth v3.0
- Digital amplifier with DPS inside
- Remote
- Optical digital audio input
- 3.5 mm audio input
- USB input audio input
- Subwoofer output
- Wall mountable
- Wireless range: 10 meters
- Channel: 2.1 ch
- Power output: 30W(L) + 30W(R) + 60W(Sub)
- Supply: AC 110-240/50~60Hz

WARNINGS AND PRECAUTIONS


Warnings

- This appliance is for household, indoor use only.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- The warranty for this product is invalidated if the product has been tampered with in any way. There are no user serviceable parts inside this product.
- Do not place this unit directly onto furniture surfaces or soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.

AFTER SALES SUPPORT



0333 200 5846



1890 917 060

accessionx-uk@teknihall.com

MODEL: 1468 PC: 72951 11/2016

- Bluetooth Soundbar
- Subwoofer
- Wall Mount
- Remote Control + Batteries
- RCA Cable
- Optical Cable
- Line-in Cable
- User Manual




3

YEAR WARRANTY

- The battery, batteries, and battery pack shall not be exposed to excessive heat such as sunshine, fire, or the like.
- Lithium batteries, like all rechargeable batteries are recyclable and should be recycled or disposed of in normal household waste. Contact your local government for disposal or recycling practices in your area. They should never be incinerated since they might explode.
- Shock hazard - Do Not Open.




Cautions

- To prevent electric shock, match wide blade of plug to wide slot, make sure it is fully inserted.
- Always unplug the appliance from the power outlet when it is not in use and before cleaning. Only use this product with the adapter provided.
- Use of any controls or adjustments or performance of procedures other than those herein specified may result in hazardous radiation exposure.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

	<p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>
	<p>The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>
	<p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>

IMPORTANT SAFETY INSTRUCTIONS

1. Read these Instructions.
2. Keep these Instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being stepped on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/ accessories specified by the manufacturer.
12. Unplug this apparatus during lightning storms or when unused for long periods.
13. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into

AFTER SALES SUPPORT		<ul style="list-style-type: none"> • Bluetooth Soundbar • Subwoofer • Wall Mount • Remote Control + Batteries • RCA Cable • Optical Cable • Line-in Cable • User Manual
 0333 200 5846  1890 917 060		
 accessionx-uk@teknihall.com		
MODEL: 1468 PC: 72951 11/2016		

3

YEAR WARRANTY

- the apparatus, the apparatus has been exposed to moisture, does not operate normally, or has been dropped.
14. Do not use the product for any purpose other than its intended use.

FAQ

Q: Why is no sound coming out of the soundbar when connected to the TV?

- A: Check to see if soundbar is powered on.
- A: Check that the audio cable is connected to a sound output connector.
- A: Check if TV is set to play sound out of audio output connector (check TV settings).
- A: Check if soundbar is set to play the correct audio source from the cable that is currently connected to the soundbar.

Q: My phone/tablet cannot make a Bluetooth connection to the soundbar:

- A: Make sure that the soundbar is in BT mode. If you cannot connect to "ENV-1468" then try holding the BT-PAIR button for a few seconds to disconnect any other device that is connected to the soundbar and try connection again.

Q: Sound sometimes falls out or sound quality drops when playing in Bluetooth mode.

- A: The soundbar has a range of up to 10 meters, but will be shorter if there are other wireless devices in the area or there is a wall between the connected device and the soundbar.

Q: The soundbar doesn't always register input from the remote?

- A: Make sure to point the remote directly at the soundbar. Try changing the batteries.

Q: The soundbar is connected to TV via optic cable but not all TV channels are playing sound?

- A: The soundbar only supports digital PCM sound. Set your TV's sound output to PCM. Check your TV manual for instructions. Alternative use the Line in cable.

AFTER SALES SUPPORT



0333 200 5846 1890 917 060

accessionx-uk@teknihall.com


• Bluetooth Soundbar
• Subwoofer
• Wall Mount
• Remote Control + Batteries
• RCA Cable
• Optical Cable
• Line-in Cable
• User Manual

MODEL: 1468 PC: 72951 11/2016


3

YEAR WARRANTY

DISPOSAL



Batteries, electrical and electronic equipment (EEE) contain materials, parts and substances, which can be dangerous to the environment and harmful to human health if waste of electrical and electronic equipment (WEEE) are not disposed of correctly.



Batteries, electrical and electronic equipment, which are marked with the WEEE logo (as shown on the left), should not be thrown away with your household waste. Contact your Local Authority Waste Disposal Department, as they will be able to provide details of the recycling options available in your area.

AFTER SALES SUPPORT



0333 200 5846



1890 917 060



accessionx-uk@teknihall.com

- Bluetooth Soundbar
- Subwoofer
- Wall Mount
- Remote Control + Batteries
- RCA Cable
- Optical Cable
- Line-in Cable
- User Manual

MODEL: 1468 PC: 72951 11/2016



YEAR WARRANTY

EnVivo

WARRANTY CARD

SOUNDBAR - 72951

PLEASE KEEP YOUR PURCHASE RECEIPT TOGETHER WITH YOUR CARD.

NAME _____

ADDRESS _____



DATE OF PURCHASE _____

LOCATION OF PURCHASE _____

Detailed description of malfunction

Accession ApS - Vandmanden 34 - DK - 9200 Aalborg SV
www.accessionx.com
accessionx-uk@teknihall.com

AFTER SALES SUPPORT



☎ 0333 200 5846 ☎ 1890 917 060

accessionx-uk@teknihall.com

MODEL: 1468 PC: 72951 11/2016

- Bluetooth Soundbar
- Subwoofer
- Wall Mount
- Remote Control + Batteries
- RCA Cable
- Optical Cable
- Line-in Cable
- User Manual

3

YEAR WARRANTY