

EnVivo

User Manual Wireless Speaker Bug



AFTER SALES SUPPORT



GB 0333 200 5846 DE 1890 917 060



accessionx-uk@teknihall.com

- Wireless Speaker Bug
- USB cable
- Audio cable
- User manual
- Warranty card

MODEL: 1476 PC: 73873 11/2016

3

YEAR WARRANTY

CONTENTS

WELCOME	4
CONTENTS	5
AFTER SALES SUPPORT	6
OVERVIEW	6
GETTING STARTED	7
OPERATING THE SPEAKER.....	8
SPEAKER CHARGING	14
SPECIFICATIONS.....	15
SAFETY PRECAUTIONS.....	16
TROUBLE SHOOTING	17
DISCLAIMER.....	23
DISPOSAL.....	24
WARRANTY.....	25
INFORMATION REGARDING THE CONFORMITY DECLARATION.....	27
WARRANTY CARD.....	31

WELCOME

You have made an excellent choice with the purchase of this quality EnVivo brand product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of EnVivo.

We want you to be completely satisfied with your purchase, so this EnVivo product is backed by a comprehensive manufacturer's 3 year warranty and an outstanding after sales

service through our dedicated Helpline. We hope you will enjoy using your purchase for many years to come. Before installing and using the product, please read the instructions thoroughly, and retain them for future reference.

Hope you have a pleasant experience.

CONTENTS

- Wireless Speaker Bug
- USB cable
- Audio cable
- User manual with warranty card

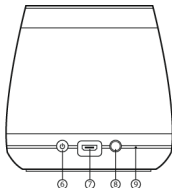 
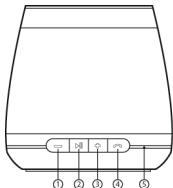 
AFTER SALES SUPPORT

Email: accessionx-uk@teknihall.com

Tel. no. for the UK: 0333 200 5846

Tel. no. for Ireland: 1890 917 060

OVERVIEW



GETTING STARTED

Key functions

1. Volume-/Previous song: Short press to go to previous song. Long press to turn down volume.
2. Play/Pause: Short press to play or pause music. Long press to disconnect BT device.
3. Volume+/Next song: Short press to skip to next song. Long press to increase volume.
4. Telephone key: Long press to decline a call, short press to answer or hang up call. Double click to call last called number.
5. Microphone.

6. Power button: Long press for 3 seconds to power on and off.
7. Micro USB: Use the provided USB cable for charging the unit.
8. 'Line in': Aux input slot, use the provided Aux-in cable to connect your Mobile, Tablet, iPad, MP3 Player etc. to play music.
9. LED Indicator.

OPERATING THE SPEAKER

A. Power On

Hold down the Power button for 3 seconds to power on the unit. The blue LED indicator will start to flash, and the speaker will play a beep sound.

B. Power Off

Hold down the Power button for 3 seconds and the speaker shuts down.

C. Bluetooth Pairing

If the speaker has never been paired with a bluetooth device before, you need to follow the instructions below to pair your speaker with your bluetooth device.

- 1) After the speaker is turned on, the speaker will be ready to be paired, this is indicated by the blue light flashing.
- 2) Activate bluetooth on your compatible device and set it to search for compatible devices.
- 3) Select the speaker "ENV-1476" from the list of found devices.



Note: If the speaker is already connected to another bluetooth device then the speaker will not appear in search list and you need to disconnect the current paired bluetooth device from the speaker and search again.

- 4) If your device asks for a passkey, enter digits "0000" and press "OK" (varies depending on the bluetooth device manufacturer, model and software version).
- 5) If the pairing is successful, the speaker will play a beep sound, and the Blue LED indicator will remain on steadily. Your speaker will be ready to play music and receive calls from mobiles through Bluetooth.

Note: If the speaker has been paired to the bluetooth device before, you need to follow the pairing instructions below to connect the speaker to the bluetooth device:

Activate bluetooth on your compatible device, turn on the speaker and the speaker will connect automatically to the compatible device.

D. Playing Music in Bluetooth Mode


After the bluetooth device is connected successfully to the speaker, you will be able to play music from your Bluetooth device. Short press  to pause music and short press  again to resume music.

Short press `+` for next song and short press `-` for previous song.

Long press `+` to increase volume and long press `-` to decrease volume.



 

E. Using the Speaker as Hands-free Wireless Speaker Phone

 

When your device is paired with the speaker and you receive an incoming call or are making an outgoing call, the speaker will shift from music mode to call mode automatically. If you get an incoming call, press `☎` to pick up the call. After completing the call press `☎` to hang up. The music will automatically resume after the call is disconnected. If you want to decline an

incoming call, hold down the  button.

F. Using the Speaker in AUX-In Mode

Plug one end of the 3.5 mm Audio Cable into the headphone or line out of your MP3 Player, Mobile or computer and plug the other end of the cable into the Aux-In jack of the Speaker. You can play music from your device.

Short press  to Mute Music and short press  again to Unmute Music. Long press  to Increase volume, and Long press  to Decrease Volume.

Note: In Aux-in mode, you cannot press  or  to choose next or previous song.

SPEAKER CHARGING

The speaker comes with a built-in rechargeable battery. Connect the USB cable provided to a computer or into a DC 5V power adaptor (not included). When charging the red LED light will turn on. The charging time is approximately 2-3 hours. When the unit is fully charged, the red LED light will turn off. Unplug the Speaker from the power device once the speaker is fully charged.

The battery playing time will be different depending on the volume when playing music. If the speaker is not being used for a long time, please continue to charge the speaker once per month, as this can protect

and extend the battery life.

SPECIFICATIONS

- Wireless Speaker Bug with built-in 3.7V Lithium chargeable 600mAh battery
- Bluetooth V4.1
- Transmission distance up to 10 m (this may vary according to environment and connected Bluetooth device)
- USB charging voltage: DC 5V
- Micro USB charging port
- Output power: 3W
- Battery capacity: 3.7V/600mAh
- Playing time up to 5 hours
- 3.5 mm audio input

- Handsfree function for call
- Bluetooth name: ENV-1476

SAFETY PRECAUTIONS

- a. Do not use or store the unit in high temperature or hazardous location.
- b. Please do not expose the unit to moisture or rain.
- c. Please do not disassemble, repair or modify the unit.
- d. The unit comes with a rechargeable battery so please do not throw or put in fire to avoid explosion.
- e. Please do not listen to music on high volume for a long time as it may

- cause damage to your ears.
- f. Low battery power may result in a reduction in bluetooth transmission distance or disconnection.

TROUBLE SHOOTING

Should you experience any difficulty while using the speaker, please refer to the following.

Not charging

Reason

The USB power adaptor (not included) is not plugged into a wall outlet or the USB cable (included) is not plugged into the micro USB jack on the side of the speaker.

Solution

Plug the USB power adaptor (not included) into a wall outlet and plug the USB cable (included) into the micro USB jack of the speaker.

Reason

Wall outlet is not functioning.

Solution

Plug another device into the same outlet to confirm the outlet is working.

Reason

Computer USB port is not functioning.

Solution

Make sure your computer power is turned on and try another USB port.

No Sound

Reason

The speaker battery is dead.

Solution

Recharge the speaker.

Reason

The speaker is not linked to the cell phone.

Solution

Go through "Speaker Operations" process to connect the speaker.

Reason

Volume is too low.

Solution

Increase the volume on your device.

Increase the volume on the speaker.

Increase the volume on the audio source.

No Audio Signal via Bluetooth connection

Reason

Speaker is not paired to the audio source.

Solution

Check whether a connection exists.

If necessary, pair the speaker to the audio source again.

Reason

3.5mm audio cable is connected.

Solution

Unplug the audio cable.

Speaker cannot be connected

Reason

Pairing does not work.

Solution

Check whether the audio source supports the A2DP protocol.

Reason

Audio source is switched off.

Solution

Switch on the audio source.

Reason

Bluetooth is switched off at the audio source.

Solution

Switch on the Bluetooth function in the audio source.

Reason

Bluetooth version is not supported.

Solution

Use a different playback unit.

Poor Sound quality from a Bluetooth device

Reason

Bluetooth device is almost out of range of the speaker.

Solution

Move your Bluetooth device closer to the speaker.

DISCLAIMER

This Speaker Bug is designed for use only in conjunction with the appropriate mobile entertainment device. Please consult your device packaging to determine whether this Speaker Bug is compatible with your particular mobile entertainment device.

We, the manufacturer, are not responsible for any damages to any mobile entertainment device incurred through use of this product.

DISPOSAL

Batteries, electrical and electronic equipment (EEE) contain materials, parts and substances, which can be dangerous to the environment and harmful to human health if waste of electrical and electronic equipment (WEEE) are not disposed of correctly.

Batteries, electrical and electronic equipment, which are marked with the WEEE logo (as shown below), should not be thrown away with your household waste. Contact your Local Authority Waste Disposal Department, as they will be able to provide details of the recycling options available in your area.



WARRANTY

We want you to be completely satisfied with your purchase so this EnVivo product is backed by a comprehensive manufacturer's 3 year warranty and an outstanding after sales service through our dedicated Helpline. If you require technical support or in the unlikely event that the purchase you have made is faulty, please telephone our Helpline for immediate assistance. Faulty product claims made within the 3 year warranty period will be repaired or replaced free of charge provided that you have satisfactory proof of purchase (keep your till receipt safe!). This does not

affect your statutory rights. However, be aware that the warranty will become null and void if the product is found to have been deliberately damaged, misused or disassembled.

INFORMATION REGARDING THE CONFORMITY DECLARATION

Hereby, Accession ApS declares that the radio equipment type BT Speaker Bug is in compliance with Directive 2014/53/EU.



The full text of the EU declaration of conformity is available at the following internet address:

<https://www.tekniehall.be/en/declaration/envivo/1476>

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

The content of this document is presented as it currently exists. Accession ApS does not accept, neither emphatically nor tacitly, any guarantee for the correctness or completeness of the content of this document. Accession ApS retains for itself the right, at any time and without previous notice, to make amendments to this document or to withdraw it completely.

EnVivo

WARRANTY CARD

WIRELESS SPEAKER BUG - 73873

PLEASE KEEP YOUR PURCHASE RECEIPT TOGETHER WITH YOUR CARD.

NAME _____

ADDRESS _____

 _____

DATE OF PURCHASE _____

LOCATION OF PURCHASE _____

Detailed description of malfunction

Accession ApS - Vandmanden 34 - DK - 9200
Aalborg SV
www.accessionx.com
accessionx-uk@teknihall.com

AFTER SALES SUPPORT



☎ 0333 200 5846 ☎ 1890 917 060



accessionx-uk@teknihall.com

MODEL: 1476 PC: 73873 11/2016

- Wireless Speaker Bug
- USB cable
- Audio cable
- User manual
- Warranty card

3

YEAR WARRANTY