

EnVivo

User Manual Bluetooth Disco Speaker



AFTER SALES SUPPORT



GB 0333 200 5846 DE 1890 917 060



accessionx-uk@teknihall.com

- Disco Speaker
- Micro USB cable
- Line in cable
- Silicon holder
- User Manual

MODEL: 1477 PC: 73943 11/2016

3

YEAR WARRANTY

CONTENTS

WELCOME	4
PRODUCT OVERVIEW	6
BLUETOOTH MODE	9
AUX MODE	11
CHARGING.....	11
LED LIGHTS	12
WARNINGS	12
TECHNICAL INFORMATION	15
DISPOSAL.....	16
INFORMATION REGARDING THE CONFORMITY DECLARATION.....	17
WARRANTY CARD.....	19

WELCOME

You have made an excellent choice with the purchase of this quality EnVivo brand product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of EnVivo.

We want you to be completely satisfied with your purchase, so this EnVivo product is backed by a comprehensive manufacturer's 3 year warranty and an outstanding after sales service through our dedicated Helpline.


We hope you will enjoy using your purchase for many years to come. Before installing and using the product, please read the instructions thoroughly, and retain them for future reference.

Hope you have a pleasant experience.

WARNING: Some people are susceptible to epileptic seizures or loss of consciousness when exposed to certain flashing lights or light patterns.

If you experience dizziness, altered vision, eye or muscle twitches, disorientation or feel strange at any time while using the product discontinue use and seek medical advice.

PRODUCT OVERVIEW

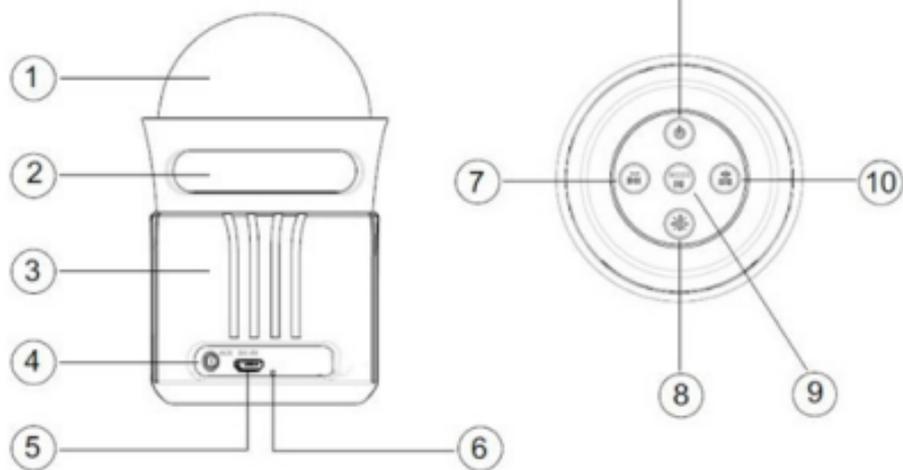

1. LED lens	2. Metal grille
3. Silica gel protection housing	4. AUX connector
5. Micro USB charging connector	6. Microphone

7. Back/ Volume down	<p>a. Short press to go back to last track.</p> <p>b. Long press to decrease volume.</p>
8. LED light controller	<p>a. Short press to turn on/off lights.</p> <p>b. Long press to enter Bluetooth re-pairing mode.</p>

<p>9. Play/ Pause/ Mode</p>	<p>a. Short press: to play/pause. b. Long press: to transfer between Bluetooth and AUX mode. c. Incoming calls: Short press to receive incoming call. Long press to reject incoming call.</p>
<p>10. Forward/ Volume up</p>	<p>a. Short press to move to next track. b. Long press to increase volume. When it gets to maximum volume, you will hear a "beep" sound.</p>

11. Power on/off	Hold down 3S key to turn on/off the speaker. There will be a blue light to indicate when it turns on.
------------------------	-------------------------------------------------------------------------------------------------------

BLUETOOTH MODE

Pairing

Turn on the speaker. Select "DC-1477" on your Bluetooth device (Smartphone, tablet, etc.). You will hear a beep sound and you can now play sound on Bluetooth device through the speaker.

Note: If your device requests a password, enter the default "0000". Refer to the user manual for you specific device for instructions on pairing and connecting Bluetooth devices. When powered on the speaker will automatically connect the last Bluetooth device it was connected to.

Note: When turned on the speaker will automatically connect to the latest connected device.

AUX MODE

Plug one end of 3.5 mm cable into the AUX slot of the speaker and the other end into the audio slot of a Mobile Phone, Notebook, Tablet PC, MP3/MP4 Player etc. You will be able to enjoy music through the speaker.

CHARGING

Plug the charging cable into the Micro USB slot of the speaker, the USB slot of a PC or the USB slot of a charger to commence charging. When the speaker is being charged, the indicator light will turn red. Once it is fully charged, the indicator light will turn off. (It is advisable for users to turn off the speaker while charging, to

reduce charging time.)

LED LIGHTS

There are LED lights that will shine from red to blue to green when the device is not playing music, or is paused. These lights will flash with tempo when music is being played.

WARNINGS

1. If the speaker cannot be turned on after pressing the POWER key, or it turns off on turning on, it is recommended to check whether it is charged. If it is out of power, please get it charged and try again later. (If you fail to power on the speaker after holding down

the POWER key, the speaker may be temporarily out of order. In this case, you must insert a tiny pin into the audio slot to activate the reset switch (The reset switch is about 16MM from the audio slot). Following this, you should be able to restart the speaker.

2. When charging make sure that the charger you are using is for DC 5V devices(USB port on computer, phone charger, tablet charger , DC 5V chargers or powerbanks). Using any other charges can damage or break the speaker.
3. If the volume of your Mobile Phone, PC, MP3/MP4 Player, CD, DVD etc. is increased to overly loud levels sound

distortion may occur. In case of sound distortion, please decrease the volume of the Mobile Phone, PC, MP3/MP4 Player, CD, DVD or of the speaker. The sound will return to normal after a short amount of time.

4. If the Bluetooth device of your Mobile Phone, PC etc. fails to link to the speaker or if fails to playing music after being connected, the user must ensure he/she has entered the correct password or whether the Bluetooth device of his/her Mobile Phone, PC etc supports A2DP.
5. Ventilations should not be impeded by covering the ventilation openings with items, such as newspapers,

table-cloths, curtains, etc.

6. Do not use the speaker outside in tropical and/or moderate climates.
7. Keep the device away from moist and/or wet areas.


TECHNICAL INFORMATION

Sound Track:	Mono
Function:	AUX, Bluetooth
Power Supply:	DC 5V, lithium battery
Battery:	3.7V 600MAH lithium battery
Output:	3W
Frequency:	150Hz-18KHz
Diameter of speaker:	40mm
Impedance:	4 Ω
Antimagnetic function:	Available
Material:	PC + ABS plastic

DISPOSAL

Batteries, electrical and electronic equipment (EEE) contain materials, parts and substances, which can be dangerous to the environment and harmful to human health if waste of electrical and electronic equipment (WEEE) are not disposed of correctly.

Batteries, electrical and electronic equipment, which are marked with the WEEE logo (as shown below), should not be thrown away with your household waste. Contact your Local Authority Waste Disposal Department, as they will be able to provide details of the recycling options available in your area.

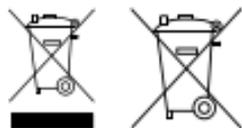

INFORMATION REGARDING THE CONFORMITY DECLARATION

Hereby, Accession ApS declares that the radio equipment type BT Disco Speaker is in compliance with Directive 2014/53/EU.



The full text of the EU declaration of conformity is available at the following internet address:

<https://www.teknihall.be/en/declaration/envivo/1477b>

Bluetooth® is a registered trademark of Bluetooth SIG, Inc.

The content of this document is presented as it currently exists. Accession ApS does not accept, neither emphatically nor tacitly, any guarantee for the correctness or completeness of the content of this document. Accession ApS retains for itself the right, at any time and without previous notice, to make amendments to this document or to withdraw it completely.

EnVivo

WARRANTY CARD

BLUETOOTH DISCO SPEAKER - 73943

PLEASE KEEP YOUR PURCHASE RECEIPT TOGETHER WITH YOUR CARD.

NAME _____

ADDRESS _____



DATE OF PURCHASE _____

LOCATION OF PURCHASE _____

Detailed description of malfunction

Accession ApS - Vandmanden 34 - DK - 9200
Aalborg SV

www.accessionx.com
accessionx-uk@teknihall.com

AFTER SALES SUPPORT



☎ 0333 200 5846 ☎ 1890 917 060



accessionx-uk@teknihall.com

- Disco Speaker
- Micro USB Cable
- Line in cable
- Silicon holder
- User Manual

MODEL: 1477 PC: 73943 11/2016

3

YEAR WARRANTY